 




AURORA / ECHELON GRILL BURNER

Model # 3041-50 & 3042-50

INSTALLER: Leave these instructions with consumer.
CONSUMER: Retain for future reference.

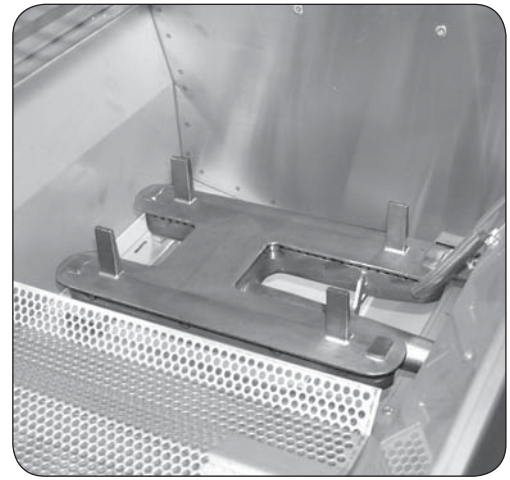

This burner is for replacement on Aurora & Echelon grills. To install, follow the steps below:

1. **Be sure the grill is completely cool and the gas is completely shut off.**
2. Remove the cooking grid from above the burner you are working on by lifting it first from the front and set it aside.
3. Remove the flavor grid from above the burner you are working on and set it aside.
4. Remove the cotter pin from the left or right rear burner anchoring peg by pulling it straight out of the cotter pin hole using fingers or needle-nose pliers (Fig. 1-1).

CAUTION: The burner is heavy.

5. Lift the back end of the burner out of the anchor peg holes, then move the burner toward the back of the grill to clear the gas inlet and set it aside (see Fig. 1-2).
6. Replace the burner by first sliding the open cylindrical end of the burner around the orifice, enveloping it and centering on it, then lower the back end anchor pegs into the anchor peg holes (reference Fig. 1-2).

Note: It is critical to the continued safe functioning of the burner that the orifice is centered and completely inside the burner gas conduit.

7. Reinsert the cotter pin into the right rear burner anchor peg using fingers or needle-nose pliers (reference Fig. 1-1).
8. Replace the flavor grid and then the cooking grid so that the cutout section of the cooking grid is lined up with the lighting tube.
9. Refer to your grill owner's manual for use.

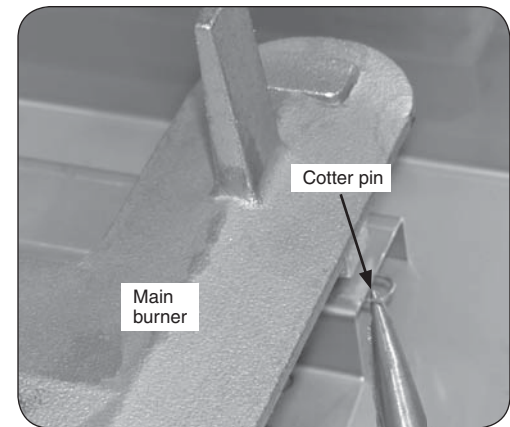 


Fig. 1-1 Installing/removing burner clip

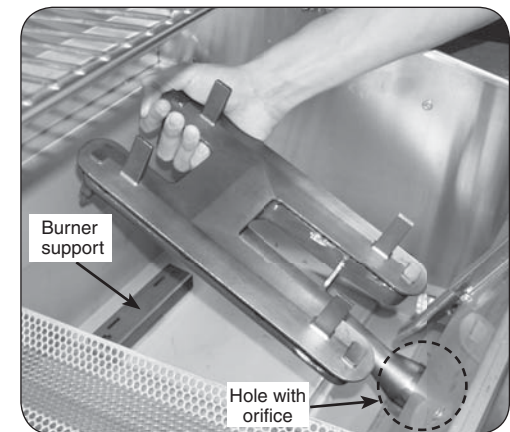 


Fig. 1-2 Removing/inserting burner